


## *2-Wire Phone Tap*

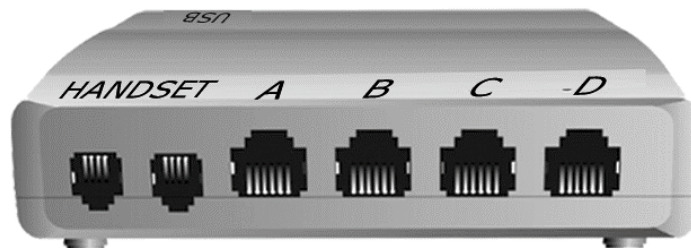

## *Quick Start Guide*

UPDATED June 2007

GL Communications Inc.  
818 West Diamond Avenue - Third Floor  
Gaithersburg, MD 20878.  
Voice 301-670-4784.  
Fax 301-670-9187  
Web page: <http://www.gl.com/>  
E-mail: [gl-info@gl.com](mailto:gl-info@gl.com)

(Intentional Blank Page)

## Table of Contents

---

<b>Section 1.0 Installation .....</b>	<b>1</b>
1.1 Software and Hardware Installation .....	1
1.2 Recorder Configuration .....	1
<b>Section 2.0 Configuration and Operation .....</b>	<b>3</b>
2.1 Connecting 2-Wire Phone Tap .....	3

## Table of Figures

---

Figure 1: Connecting 2-Wire Phone Tap .....	3
---	---

(Intentional Blank Page)

## Section 1.0 Installation

---

### 1.1 Software and Hardware Installation

- 1) Execute the **setup.exe** from the 2-Wire Phone Tap Installation CD.
- 2) Follow the instructions on screen to complete the software installation

---

**Note:** Do not connect the 2-Wire Phone Tap hardware until prompted during the installation.

---

- 3) During the installation, when prompted with the message '**Please Insert the USB Connector and wait until Windows Drivers are loaded**', please connect the 2-Wire Phone Tap hardware to the USB port of the system. The software installs the required hardware drivers. Please wait until drivers are completely installed.
- 4) After the hardware installation is complete (Found New Hardware), click **OK** to continue with the rest of the software installation.
- 5) After the software installation is complete, click **Close** from the **Universal Adaptor Setup Completed** screen, and then click **Finish** from the Install Shield screen.
- 6) Click **Next** in the **Recorder Setup** screen to launch the application and configure the hardware as explained in the section below.

### 1.2 Recorder Configuration

- 7) From the Connection screen, select **Line Only Connection**. Click **Next**.
  - 8) From the Recording Start Stop Method screen, select **Use Line Current (off hook) Detect**. Click **Next**.
  - 9) From the Off-Hook Test screen, click **Next**.
  - 10) From the Audio Levels screen, click **Next**. Note, do not change levels at this time.
  - 11) From the Dialed Digits Check screen, confirm that the **Disable Digit Detect** option is unchecked. Click **Next**.
  - 12) From the Record Setup Complete screen, click **Finish**.
  - 13) After the completion of the recorder setup, the Software Registration screen will appear. Select **Don't Show this Window Again**, and click **Cancel**.
- This is then followed by **Xt-Recorder Choose Defaults** screen. Select **Record All Calls**. Click **Ok**. The 2-Wire Phone Tap is now configured.

(Intentional Blank Page)

Section 2.0 Configuration and Operation

2.1 Connecting 2-Wire Phone Tap

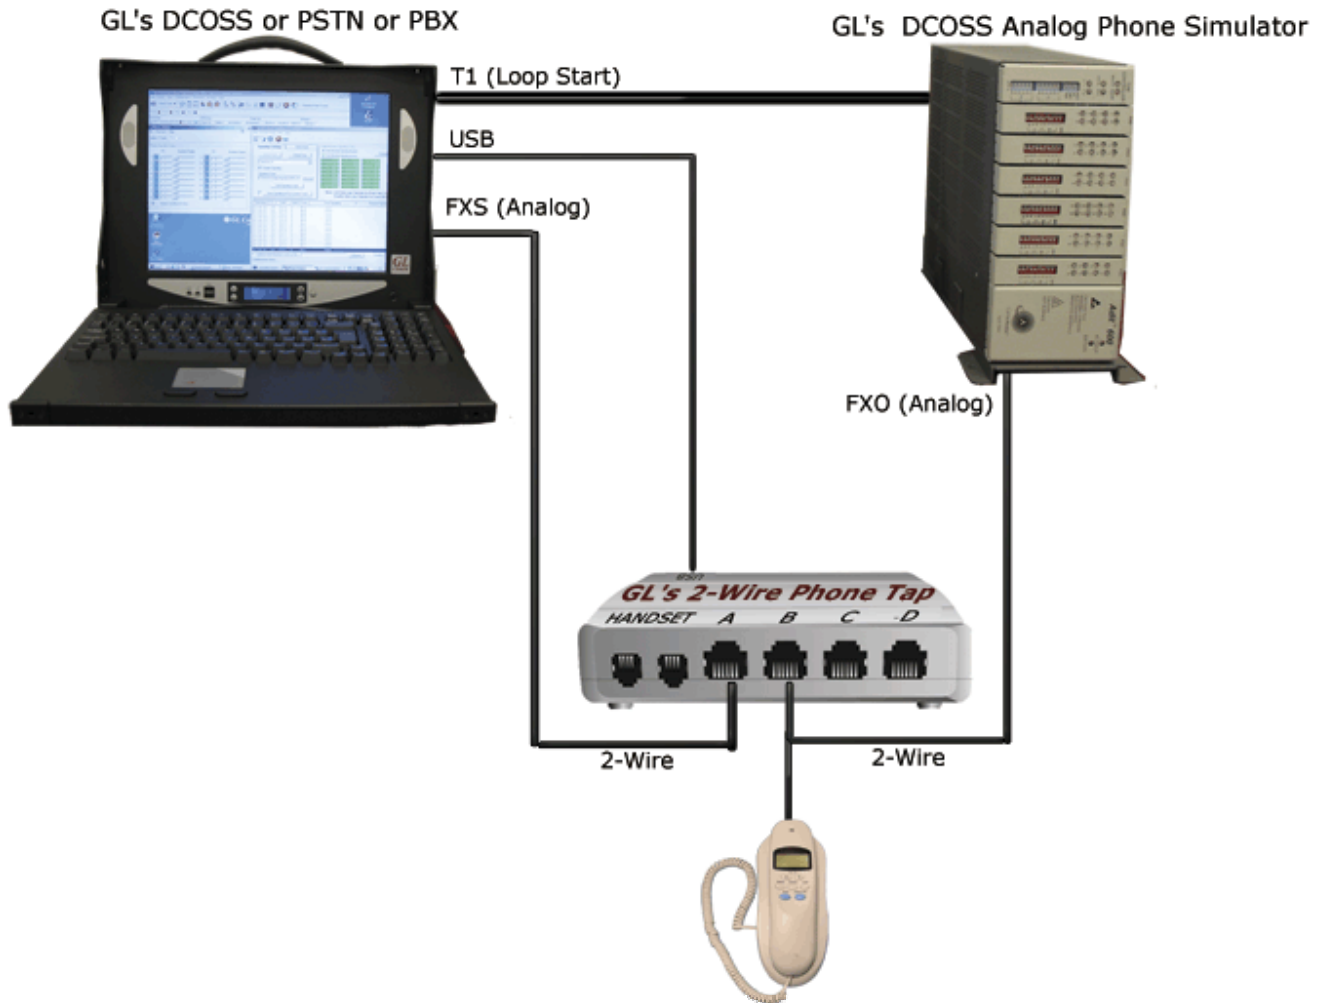


Figure 1: Connecting 2-Wire Phone Tap

- 1) Follow the Wiring Diagram (shown above) for connecting the GL 2-Wire Phone Tap to the Analog Phone and to the PSTN (FXS).
- 2) The Xtension Recorder application can be found on the desktop as well as in the installed directory, `\Program Files\Comvurgent\XtRecorder\XtRecorder.exe`. Execute the **XtRecorder.exe** application.
- 3) Select the **Options** tab. From the **Record Format** window, change the recording format to **Perfect Digital Recording**.
- 4) Select the **File Management** tab. Notice the **Store Calls At** window. The default directory for storing all recorded files is `\Documents and Settings\...\My Documents\My Calls`. If the calls are to be recorded to a different folder, modify the path
- 5) The GL 2-Wire Phone Tap is auto configured and will run in the background (notice the XtRecorder icon in the System tray). Once the 2-Wire Call is established, the software will automatically begin recording to the specified directory. After the call is disconnected, the recording of the file will be complete.